

| Canon Lenses | Setup | Lens Port | Extension Ring | Zoom Gear | Focus Gear |
|--|-------|-------------------------|-------------------------|------------------------------|---------------------------|
| | | Click on the link below | Click on the link below | Click on the link below | Click on the link below |
| Canon EF-S 60mm f/2.8 Macro USM | I | MP60S | | | |
| Canon EF 100mm f/2.8L Macro IS USM | I | MP100 | | | * F100USM |
| | II | MP60S | + EXR60 | | * F100USM |
| Canon EF 100mm f/2.8 Macro USM | I | MP100 | | | |
| | II | MP60S | EXR50 | | |
| Canon EF 8-15mm f/4L Fisheye USM *Need to remove shade when used on full frame camera | I | DPG203 | + EXR20 | + C8-15F4 | |
| | II | DPA203 | + EXR20 | + C8-15F4 | |
| | III | DPG100 | | + C8-15F4 | |
| Canon EF 15mm f/2.8 Fisheye | I | DPG203 | | | |
| | II | DPA203 | | | |
| Canon EF 50mm f/1.2 L USM | I | DPG203 | + EXR20 | | |
| | II | DPA203 | + EXR20 | | |
| Canon EF 16-35mm f/2.8L III USM | I | DPG203 | + EXR90 | + C16-35F2-3 | |
| | II | DPA203 | + EXR90 | + C16-35F2-3 | |
| Canon EF 16-35mm f/2.8L II USM | I | DPG203 | + EXR70 | + C16-35F2-2 | |
| | II | DPA203 | + EXR70 | + C16-35F2-2 | |
| Canon EF 16-35mm f/2.8L USM | I | DPG203 | + EXR70 | + C16-35F2 | |
| | II | DPA203 | + EXR70 | + C16-35F2 | |
| Canon EF 16-35mm f/4L IS USM | I | DPG203 | + EXR70 | + C16-35F4 | |
| | II | DPA203 | + EXR70 | + C16-35F4 | |
| Canon EF 17-40mm f/4L USM | I | DPG203 | + EXR50 | + C17-40F4 | |
| | II | DPA203 | + EXR50 | + C17-40F4 | |
| Canon EF 24mm f/1.4L II USM | I | DPG203 | + EXR40 | | |
| | II | DPA203 | + EXR40 | | |
| Canon EF 24-70mm f/2.8L II USM | I | DPG203 | + EXR70 | + C24-70F2-2 | |
| | II | DPA203 | + EXR70 | + C24-70F2-2 | |
| Canon EF 24-70mm f/4L IS USM | I | DPG203 | + EXR70 | + C24-70F4 | |
| | II | DPA203 | + EXR70 | + C24-70F4 | |
| Canon EF 24-105mm f/4L IS USM | I | DPG203 | + EXR70 | + C24-105F4 | |
| | II | DPA203 | + EXR70 | + C24-105F4 | |
| Canon EF 24-105mm f/3.5-5.6 IS STM | I | DPG203 | + EXR60 | + C24-105F3 | |
| | II | DPA203 | + EXR60 | + C24-105F3 | |

Nikon Lenses

| | Setup | Lens Port Click on the link below | | Extension Ring Click on the link below | | Zoom Gear Click on the link below | | Focus Gear Click on the link below |
|---|-------|---|---|--|---|---|--|--|
| Nikon AF-S Micro 60mm f/2.8G ED | I | MP60S | + | EXR20 | | | | |
| Nikon AF Micro 60mm f/2.8D | I | MP60S | + | EXR20 | | | | |
| Nikon AF-S VR Micro 105mm f/2.8G IF-ED | I | MP100 | | | | | | |
| Nikon AF Micro 105mm f/2.8D | I | MP100 | | | | | | |
| Nikon AF-S 8-15mm f/3.5-4.5 E ED Fisheye | I | DPG203 | + | EXR20 | + | N8-15F3 | | |
| *Need to remove shade when used on full frame camera | II | DPA203 | + | EXR20 | + | N8-15F3 | | |
| | III | DPG100 | | | + | N8-15F3 | | |
| Nikon AF DX Fisheye 10.5mm f/2.8G ED | I | DPG203 | | | | | | |
| | II | DPA203 | | | | | | |
| Nikon AF Fisheye 16mm f/2.8D | I | DPG203 | | | | | | |
| | II | DPA203 | | | | | | |
| Nikon AF-S 20mm f/1.8 G ED | I | DPG203 | + | EXR40 | | | | |
| | II | DPA203 | + | EXR40 | | | | |
| Nikon AF-S 50mm f/1.4 G | I | DPG203 | | | | | | |
| | II | DPA203 | | | | | | |
| Nikon AF-S 14-24mm f/2.8G ED | I | DPG203 | + | EXR70 | + | N14-24F2 | | |
| | II | DPA203 | + | EXR70 | + | N14-24F2 | | |
| Nikon AF-S 16-35mm f/4G ED VR | I | DPG203 | + | EXR80 | + | N16-35F4 | | |
| | II | DPA203 | + | EXR80 | + | N16-35F4 | | |

Samyang Lenses

| | Setup | Lens Port Click on the link below | | Extension Ring Click on the link below | | Zoom Gear Click on the link below | | Focus Gear Click on the link below |
|---------------------------------------|-------|---|---|--|--|---|--|--|
| Samyang FE 14mm f/2.8 AF ED AS IF UMC | I | DPG203 | + | EXR50 | | | | |
| | II | DPA203 | + | EXR50 | | | | |

Sigma Lenses

| | Setup | Lens Port Click on the link below | | Extension Ring Click on the link below | | Zoom Gear Click on the link below | | Focus Gear Click on the link below |
|---|-------|---|---|--|---|---|--|--|
| Sigma 50mm f/2.8 EX DG Macro | I | MP60S | | | | | | |
| Sigma 105mm f/2.8 EX DG OS HSM Macro | I | MP60S | + | EXR50 | | | | |
| Sigma 20mm f/1.4 DG HSM Art | I | DPG203 | + | EXR70 | | | | |
| | II | DPA203 | + | EXR70 | | | | |
| Sigma 10mm f/2.8 EX DC HSM Fisheye | I | DPG203 | | | | | | |
| | II | DPA203 | | | | | | |
| Sigma 15mm f/2.8 EX DG Diagonal Fisheye | I | DPG203 | | | | | | |
| | II | DPA203 | | | | | | |
| Sigma 24mm f/1.4 DG HSM Art | I | DPG203 | + | EXR50 | | | | |
| | II | DPA203 | + | EXR50 | | | | |
| Sigma 35mm f/1.4 DG HSM Art | I | DPG203 | + | EXR50 | | | | |
| | II | DPA203 | + | EXR50 | | | | |
| Sigma 50mm f/1.4 DG HSM Art | I | DPG203 | + | EXR50 | | | | |
| | II | DPA203 | + | EXR50 | | | | |
| Sigma 18-35mm f/1.8 DC HSM Art | I | DPG203 | + | EXR80 | + | S18-35F1 | | |
| | II | DPA203 | + | EXR80 | + | S18-35F1 | | |
| Sigma 17-70mm f/2.8-4 DC MACRO HSM/C | I | DPG203 | + | EXR40 | + | S17-70F2C | | |
| | II | DPA203 | + | EXR40 | + | S17-70F2C | | |

Tokina Lenses

| | Setup | Lens Port | | Extension Ring | | Zoom Gear | | Focus Gear |
|--|-------|-----------|---|----------------|---|-----------|--|------------|
| Tokina AT-X 10-17mm f/3.5-4.5 DX FishEye | | | | | | | | |
| Tokina AT-X 10-17mm f/3.5-4.5 DX NH FishEye | I | DPG203 | + | EXR20 | + | T10-17F3 | | |
| | II | DPA203 | + | EXR20 | + | T10-17F3 | | |
| | II | DPG100 | | | + | T10-17F3 | | |
| Tokina AT-X 10-17mm f/3.5-4.5 DX FishEye | | | | | | | | |
| Tokina AT-X 10-17mm f/3.5-4.5 DX NH FishEye with Kenko 1.4x Teleplus Pro 300DGX | I | DPG203 | + | EXR40 | + | T10-17F3T | | |
| | II | DPA203 | + | EXR40 | + | T10-17F3T | | |
| | II | DPG100 | | EXR20 | + | T10-17F3T | | |

If your lens is not listed please [write us](#)

Revised August, 2020